## SKU#0400

### WEIGHT 2.8KG

FALZ CUTTER

USE CORRECT POSITION

MAX SIZE



DOUBLE SEAMING PROFILE CUTTING MACHINE

# FALZ CUTTER

#### ENG

Falz Cutter is intended for double-lock standing seam metal roof dismantling, It dissects double-lock standing seam connection places.

Falz Cutter can be positioned at any double-locked standing seam point which makes it possible not only to remove connection places of the roof, but to cut out area for various types of needs for example ventilation shafts and roof windows.

#### TECHNICAL DATA

• WEIGHT 2.8 KG

# Starting from minimum torque of 60 N / m for soft roof seament

toraue of 110 N / m and more

MAX THICKNESS

MAX. SPEED


We recommend to use cordless drill with

- 30 m/ min
  - ROOF 100 м² / 7
- STAINLESS STEEL: 0.5 MM
- ALUMINUM, COPPER, ZINC: 0.8 MM
- STEEL: 0.7 MM

THE TOOLS ARE PLACED INSIDE THE MILITARY GRADE CASES WHICH HAVE SAFETY FOAM.





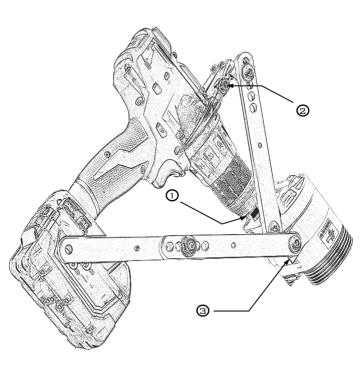



When setting up the FALZ CUTTER we must remove and make sure that cordless drill accumulator is removed from the Accumulator drill machine

Only when we are definitely sure that everything is connected properly only then we place the battery inside the cordless drill machine and start working!



Position the cordless drill machine on the 10mm rotating hex cap head axle and tighten it.



Tighten the cordless drill inside the Holder with the key that comes with the the tool. The holder must be tightened until the holder sides stops against the cordless drill machine.




Adjust and Tighten the stabilization bar. One side must be positioned right by the Falz Cutter specific side and other side must adjusted right by the Drill machine angle so the stabilization bar stops by Accumulator drill machine.

BEFORE INSERTING THE BATTERY IN CORDLESS DRILL MACHINE, READ THE MAN-UAL

"IMPORTANT SAFETY INFORMATION FOR OPERATING THE FALZ CUTTER"



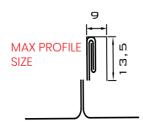



Make sure the profile side is correct which is always left side

#### STANDART DOUBLE SEAMING PROFILE

